

# SUPER-501 洗機程序

# SUPER-501 Cleaning Procedure


1. 先在 SUPER-501 安裝空濾芯
1. Install the Cleaning Powder Unit in the SUPER-501



2. 用 500 克檸檬酸\* + 2 公升自來水製作檸檬酸溶液
2. Mix 500g citric acid\* + 2 Liter Tap Water



3. 用泵將檸檬酸溶液從下水喉泵入 SUPER-501
3. Use water pump to pump in the solution from water discharge hose into SUPER-501

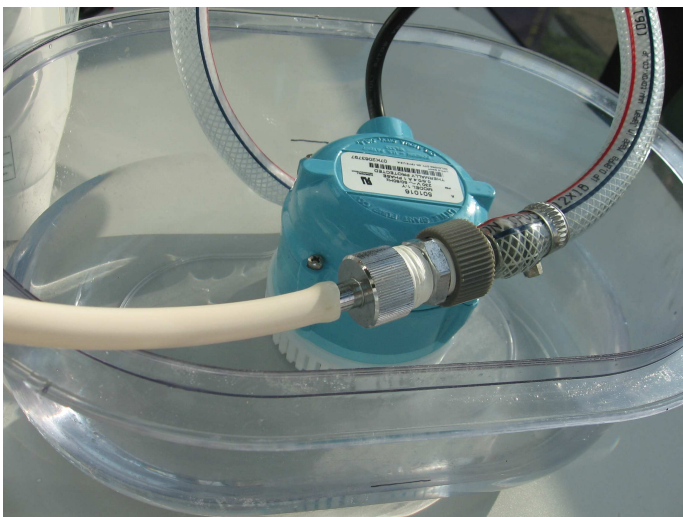

\* 必需為 100%純檸檬酸

\* Must be 100% pure citric acid

可以加入暖水製作溶液

Warm water can also be used for mixing solution

4. 把上喉流出的水流回溶液盤內做循環 20 分鐘

4. Draw the liquid came out from flexible pipe back to the solution container. Keep on this liquid cycle for 20 minutes



5. 放自來水到溶液盤內，把上喉流出的水棄掉，終止循環，就這樣放水 20 分鐘

5. Draw Tap water to the solution container, discard the liquid came out from flexible pipe. Keep on for 20 minutes



在另一組上喉及下水喉，重覆步驟 3~5



Repeat Step 3~5 on the other pair of flexible pipe & water discharge hose

水泵資料 Pump Information  
**SERIES**

**SUBMERSIBLE**

170/205  
GPH

**Pump**

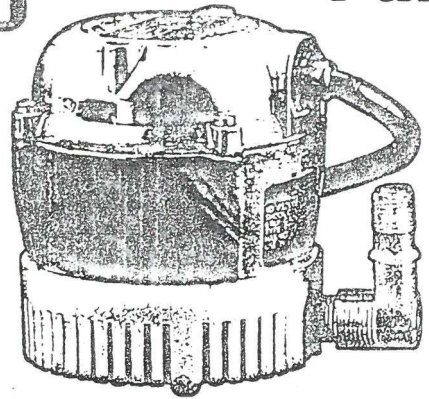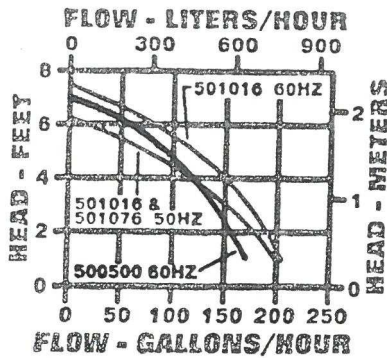

**Specifications**

Item No.	HP	Volts	Discharge (MNPT)	Hertz	Running		Gallons Per Hour at Ht.		
					Amps	Watts	1ft	3ft	5ft
500500	1/200	115	1/4"	60	1.1	70	170	140	100
501016	1/150	230	1/4"	50/60	0.6/0.4	70	205	168	120
501076	1/150	230	1/4"	50	0.4	70	200	150	75

Item No.	Shut Off (ft.)	PSI	Cord (ft.)	Dimensions (inches)
500500	7	3.0	18	4.3 x 4.1
501016	7.4	3.2	12 no plug	4.3 x 4.1
501076	6.2	2.7	12 no plug	4.3 x 4.1

ITEM #: **501076**

MODEL: 1-Y

230V    50Hz    0 a  
12ft.    Cord



膠喉 → 5分  
(033 stock)  
sold 067

Size On-Line



www.LittleGiantPump.com

美國、日本磁力驅動泵    工業安全設備  
各類電鍍器材配件    美國名廠濾材

項目未能盡錄，歡迎駕臨本公司門市部垂詢訂購

**FACTORY 廠：**

Unit 11, 13/F., Block 'C' 1-33 Cheung Tat Road, Tsing Yi Industrial Centre, Phase 2, Tsing Yi Island, N.T., Hong Kong.  
香港青衣長達路1-33號青衣工業中心第二期C座13字樓11號

**MONGKOK SHOWROOM 旺角門市部：**

G/F, 929 Canton Road, Mongkok, Kowloon, Hong Kong.    Tel: 2495-0707  
2413-4936  
E-mail: rehoboth@netvigator.com    Fax: 2431-0290  
香港九龍旺角廣東道929號地舖

G/F, 359 Reclamation Street, Mongkok, Kowloon, Hong Kong.  
香港九龍旺角新填地街359號地舖

謝錦蓮

Kim K. L. Tse

**LE**  
**ump**

**IES**

include

